

WNUDS - INSTALL SHEET


TAILGATE SEAL

S101 UNIVERSAL TAILGATE SEAL C/W SELF ADHESIVE TAPE 30M Roll

STEP 1:


Open tailgate and wash back of Ute bed where tailgate seal is to be applied. Wash thoroughly with soap and water. Make sure surface is completely dry before installing seal.

STEP 2:

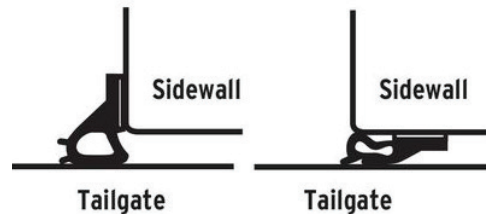

Seal may be installed either along the rear face or the inside surface depending on the tailgate sidewall structure. Cut a small sample and test fit, making sure that bulb end compresses when the tailgate is closed.

STEP 3:

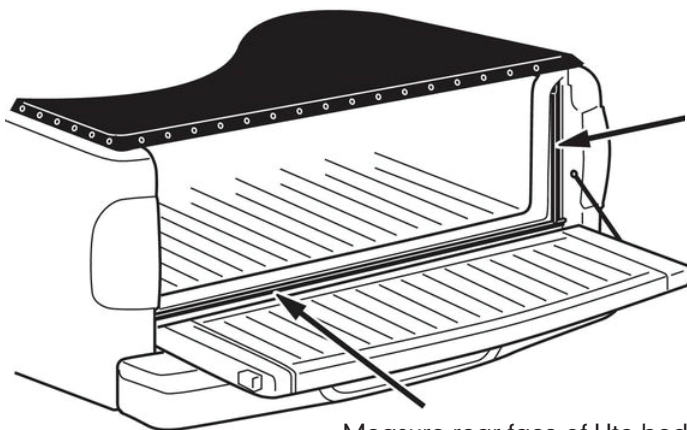

Measure and cut seal for each side wall from Ute bed seal to top of sidewall frame.

Measure rear face of Ute bed bottom and cut Tailgate seal to fit from sidewall to sidewall. Remove release strip from adhesive tape and apply seal, starting at one end. **DO NOT STRETCH SEAL WHEN APPLYING.**

Close the tailgate and check for even fit of seal on bottom and both sides. If necessary, reposition seal for better fit. Permanently affix the tailgate seal by firmly compressing seal along its whole length. Let seal stand for 10 minutes.